

# Print Data

Below you will find brief instructions for checking and preparing files before uploading.

## Must be without white background

Important


 **Important**

Your file must not contain a white background. This step is critical for a correct print result.

 **Correct**



 **Wrong**

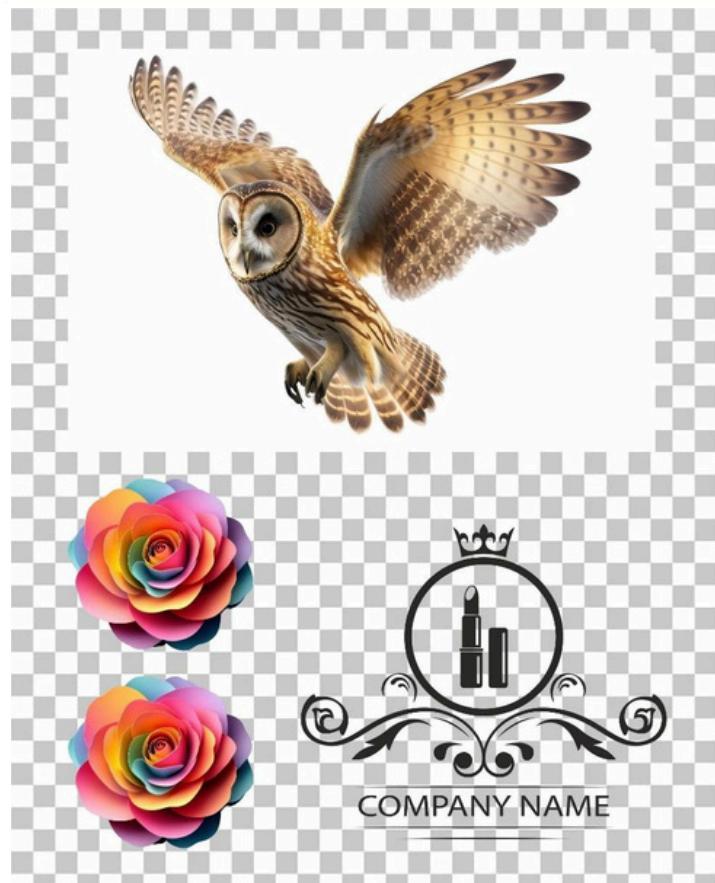

## How to verify data correctly?

**1** Insert the print data into CorelDRAW


**2** Add a colored background

**3** Verify the correctness of the data.

 The background must not be tinted white in Photoshop.

 Data must be formatted to 56 x 100. Larger formats cannot be printed.

## Discover our other products

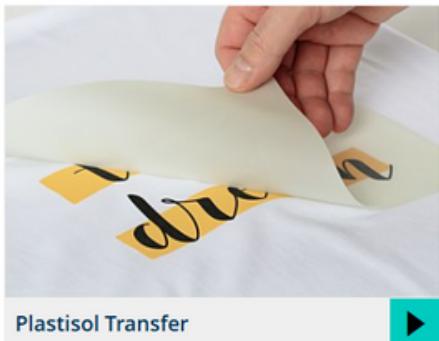

Plastisol Transfer



Blockout Transfer



Wassertransfer



Neontransfer



Sportswear Transfer



Reflextransfer silber

You can find all products at: [www.plastisoltransfer24.com](http://www.plastisoltransfer24.com)

[Free sample](#)

## Why should I choose Plastisoltransfer24?



### Highest Quality

Our professional products meet the highest demands and can withstand very tough conditions.



### Delivery in 24 hours

Thanks to our most modern machine park and flexible team, we can process large orders in a short amount of time - as quickly as one work day!



### Great Price

Even with relatively small print volumes, we are able to deliver reasonable prices, with large volumes we are at the top while maintaining the quality of the market.



### We care!

We always strive for maximum responsibility to the environment, society and employees.